


FLIPMODE

Installation and use manual

Please read all instructions carefully before installation.


Unboxing Flipmode

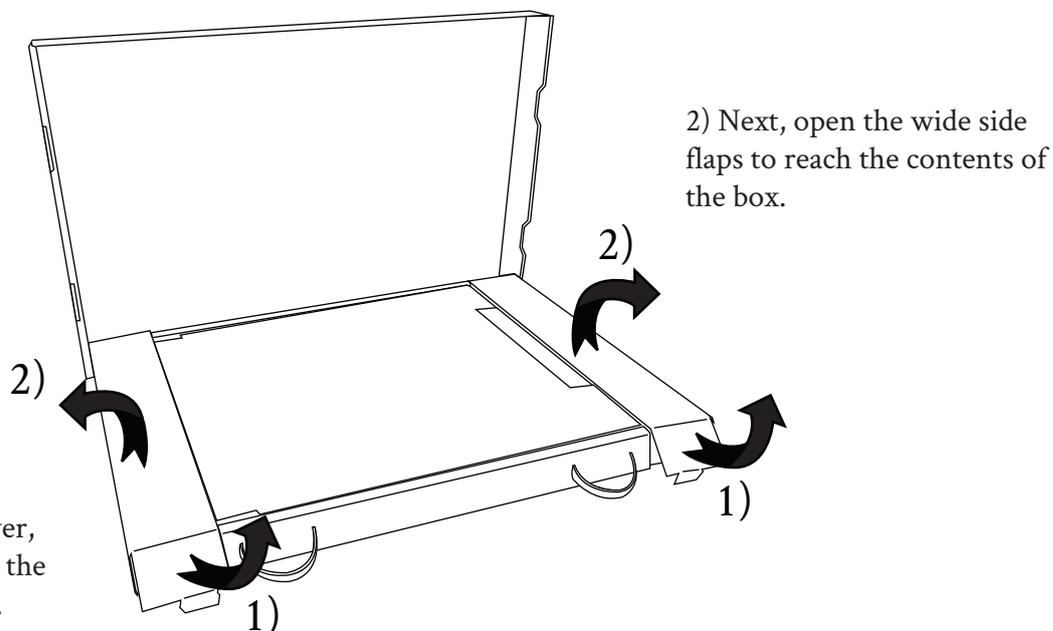

After opening the top cover, make sure to 1) first open the flaps at the top of the box.


Flipmode box contents

The Flipmode box should contain the following parts and components (the parts and components are not in scale):

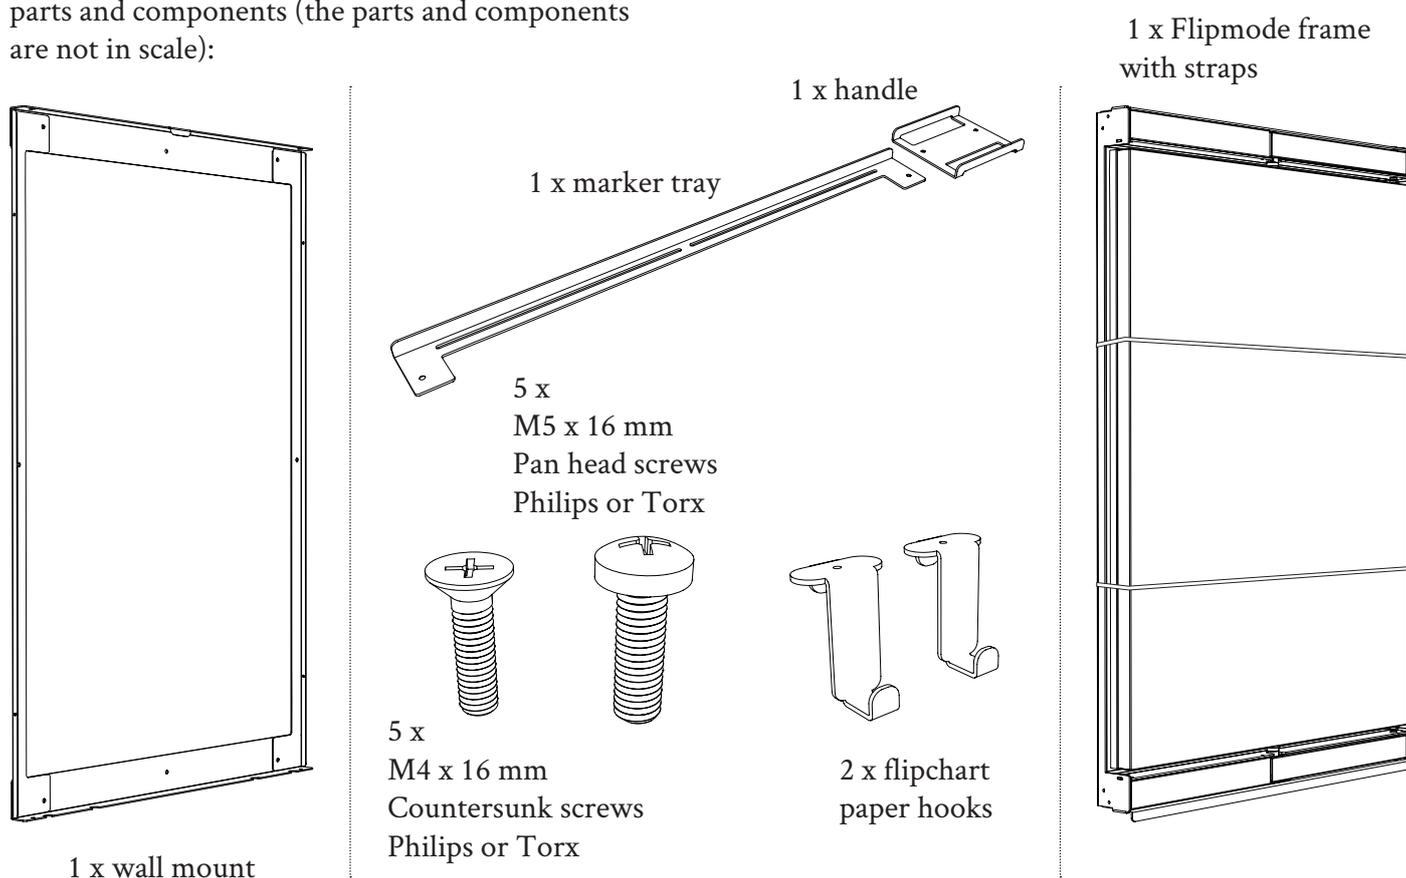

Installing Flipmode

In case you are installing several Flipmodes:


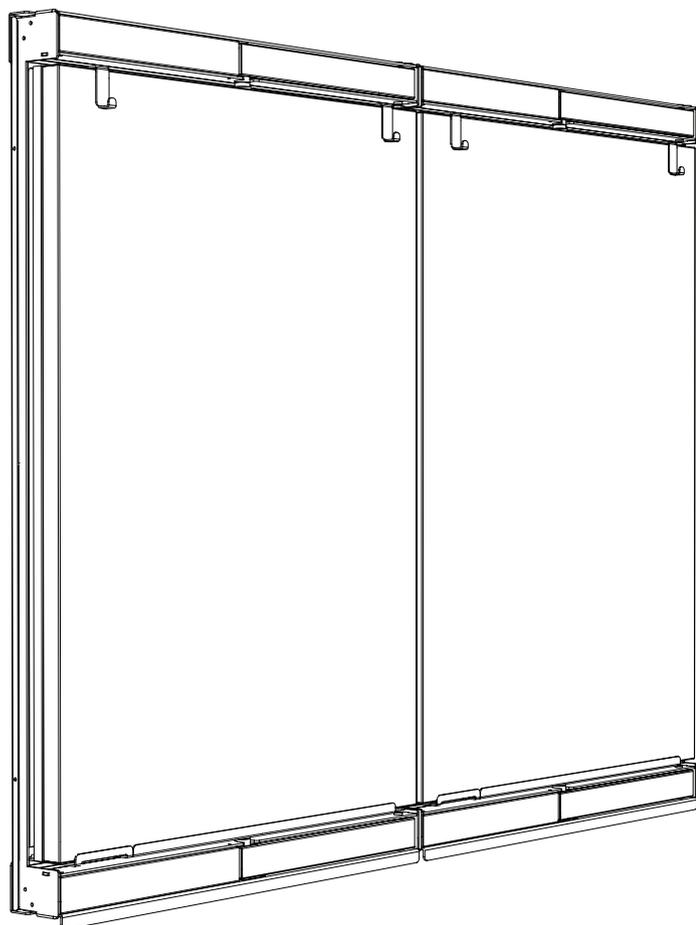


In case you are installing several Flipmodes side by side, we recommend to use the side edge of the first Flipmode for installing the next one in the correct position, and so forth.

If possible, we recommend that you start by installing the rightmost Flipmode first, as this way it is easiest to remove the straps from the doors.

Another option is to first install all wall mounts, and then attach the Flipmode frames to them.


1

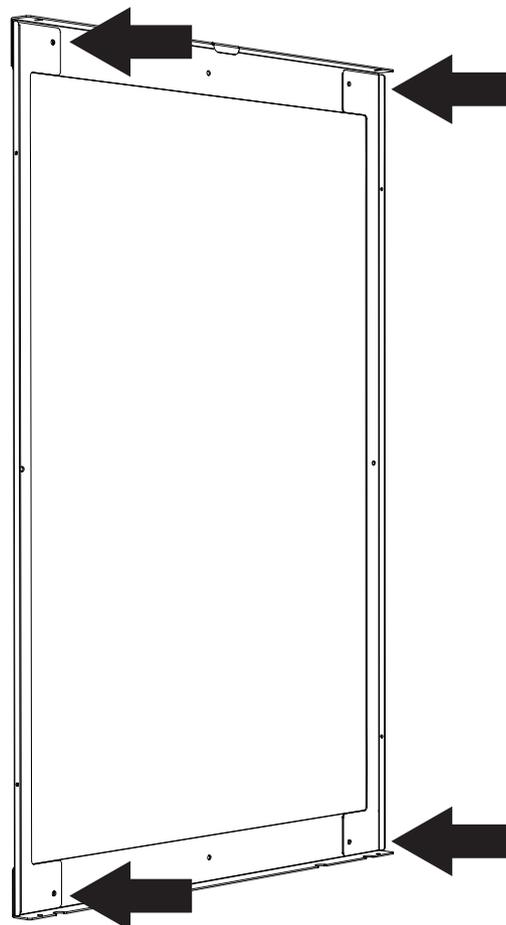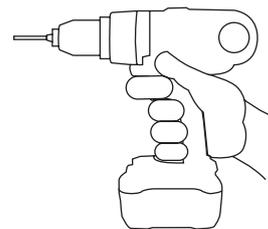

Install the wall mount to the wall by using a screw in each corner. Please make sure to use heavy-duty wall anchors. The mounting holes are designed for 6 mm metric screws, which enables the use of alternatively 3/16 inch or 1/4 inch screws.

Wall mounting accessories are not included in the delivery.

2

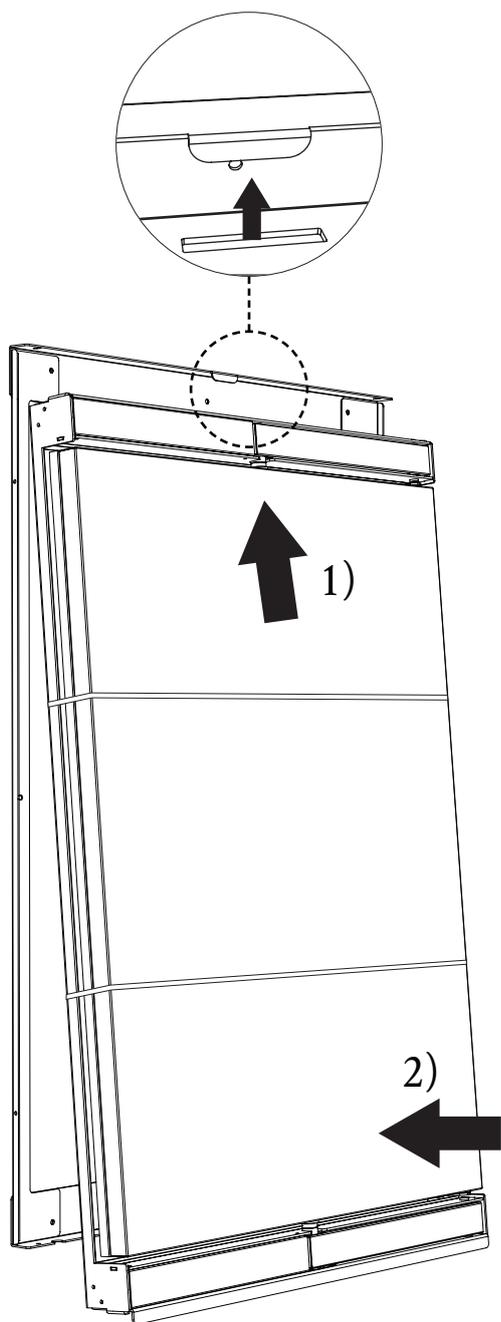


Place the Flipmode frame in the secured wall mount by...

1) ...first, sliding the top of the frame into place so that the flap in the wall mount is inserted into the corresponding alignment hole at the top of the frame, and...


2) ...second, by pushing the bottom of the Flipmode frame inside the wall mount.

3

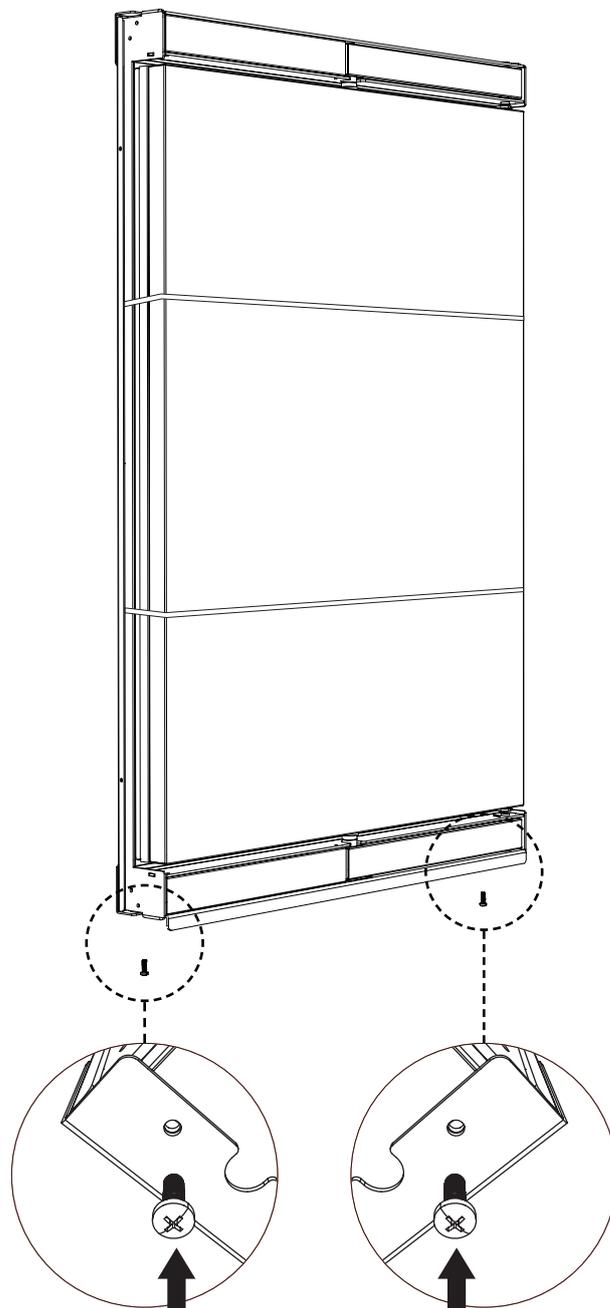

Secure the frame to the wall mount by attaching it with the included M5 pan head screws.



First, install and secure two M5 screws on the bottom of the frame. You may need to slide the bottom of the frame slightly outwards to align the mounting holes. Be careful not to slide the frame out of the wall mount while adjusting it.


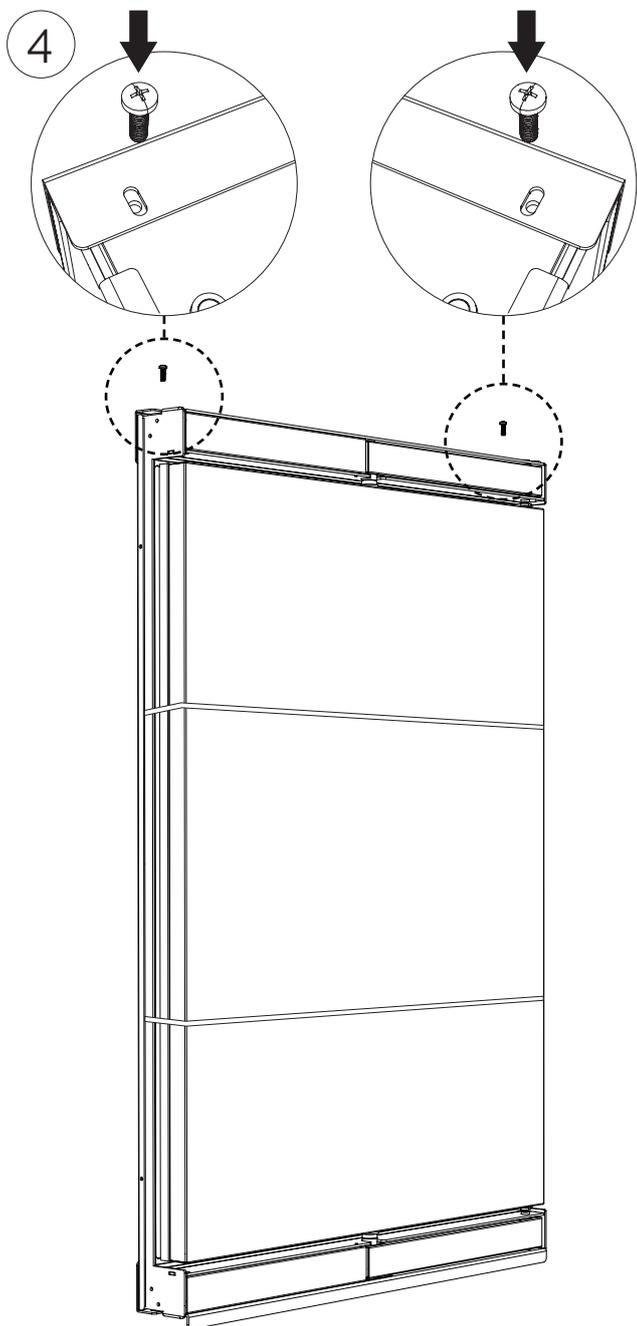


Next, install and secure two M5 pan head screws on the top of the frame while pushing the top of the Flipmode frame towards the wall.


5

After securing the Flipmode frame to the wall mount, cut the straps holding the doors closed. Make sure to cut them at the slits between the door and the rest of the frame, to reduce risk of damaging the surface of the product.

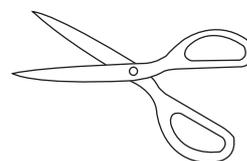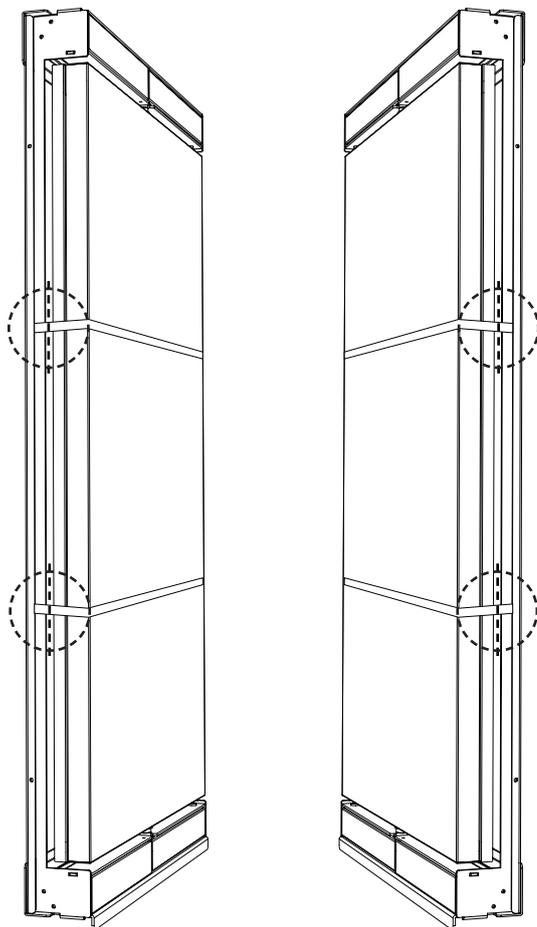

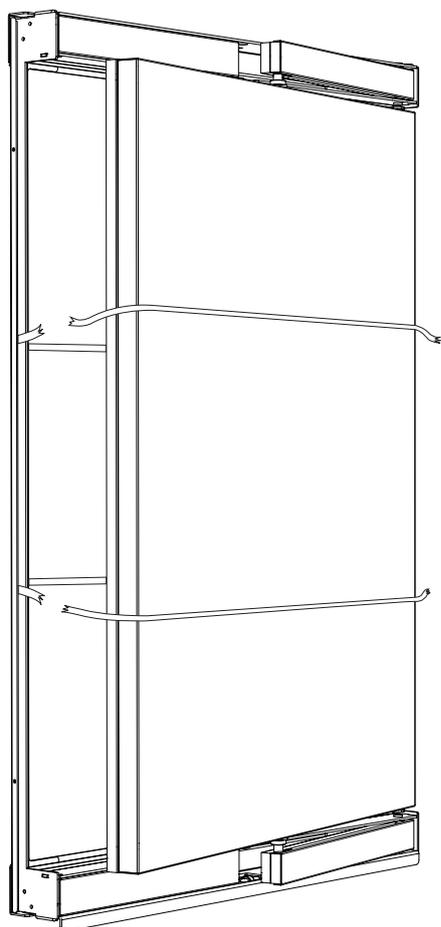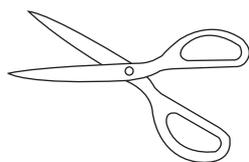

The straps should be cut on both sides, and once that is done, they can be removed by pulling them out through the slits on the sides.

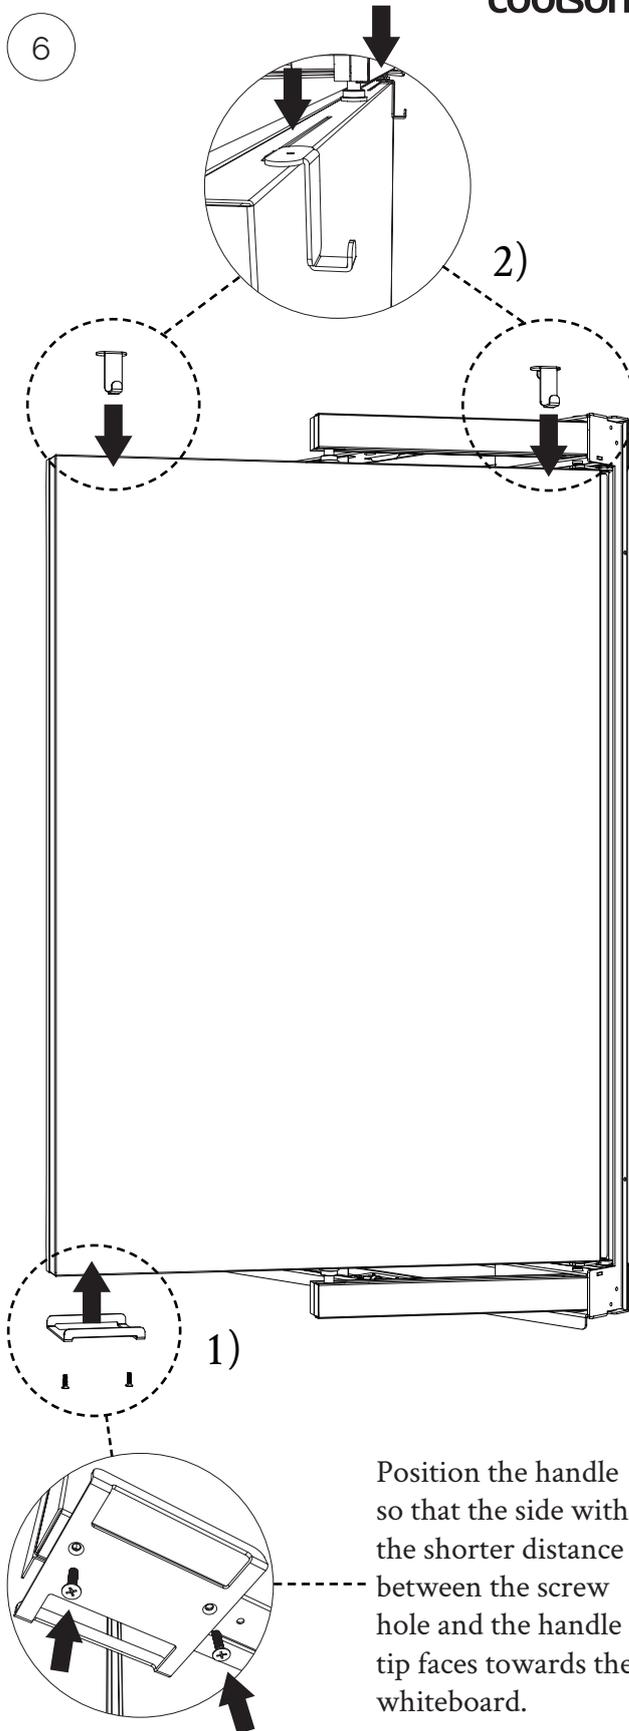


1) Open the door and attach the handle with two countersunk M4 screws.

2) If you're planning on using a flipchart paper, the hooks are easiest to install when the door is open. Place the hooks' flanges into the grooves cut into the door panel frame.


Position the handle so that the side with the shorter distance between the screw hole and the handle tip faces towards the whiteboard.

7

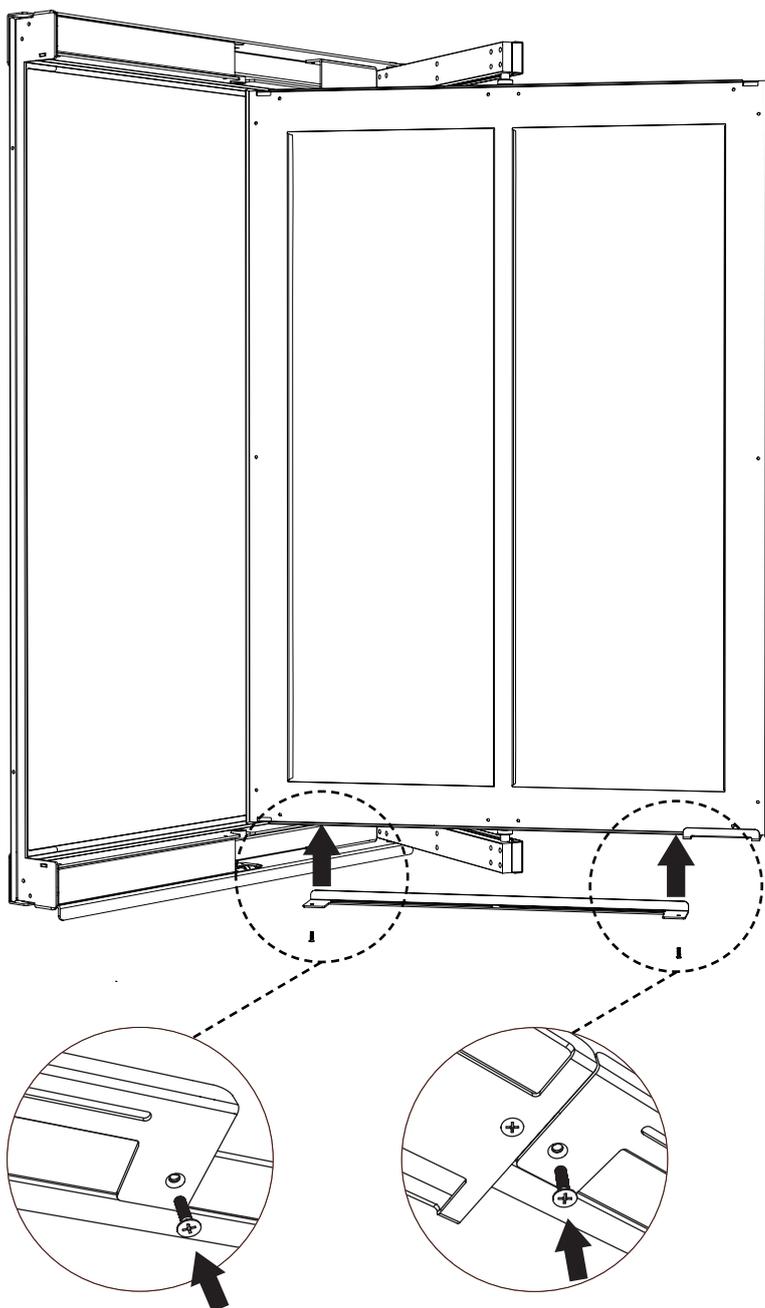

Install the marker tray with two countersunk M4 screws. In order to do this, first fully open the door and slightly close it by turning outwards the side with the framing for the acoustic board (seen in the picture above). This way it will be easier to attach the screws to their corresponding holes. Make sure that the folded side of the marker tray is positioned towards the whiteboard.

8

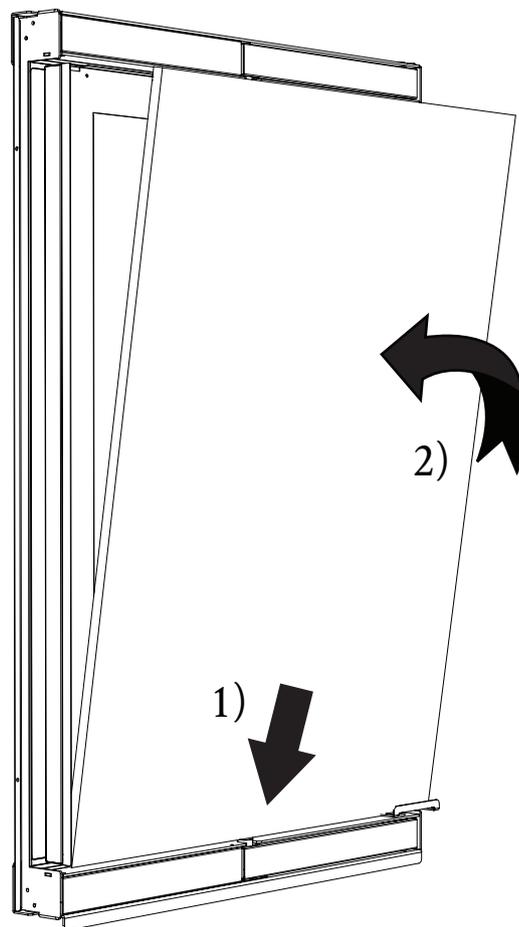


Attach the acoustic board. The acoustic board is held in place with magnets. Install the board to the side containing the acoustic board framing by 1) first sliding its bottom edge onto the door's flanged edge. 2) Then, push the top edge of the acoustic board into the frame.

The flanges have slots in the corners at the top and bottom edges of the framing. For removing the acoustic board, just grab it using these slots and pull it gently out of the framing.


After attaching the acoustic board, your Flipmode is ready for use!

Using Flipmode


Starting with the acoustic board facing outwards

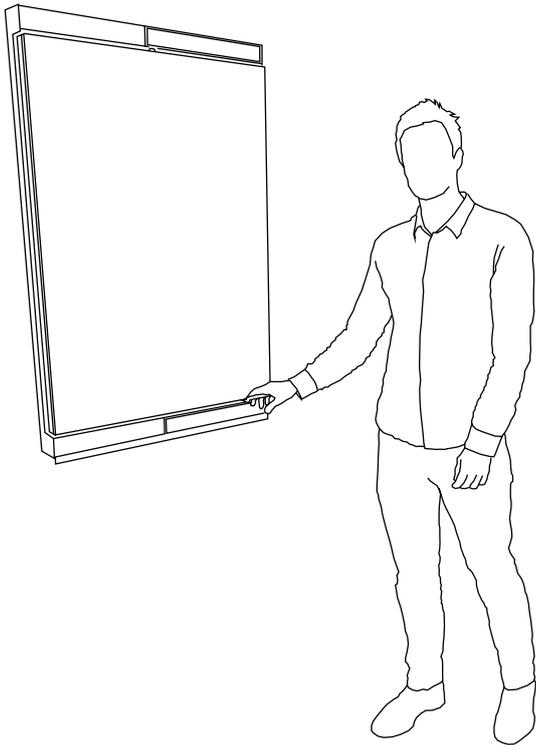


1) Pull the handle

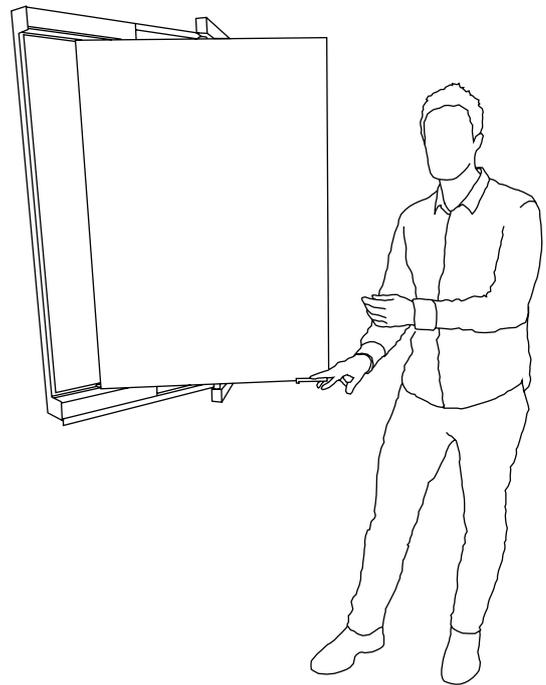

2) Flip the panel

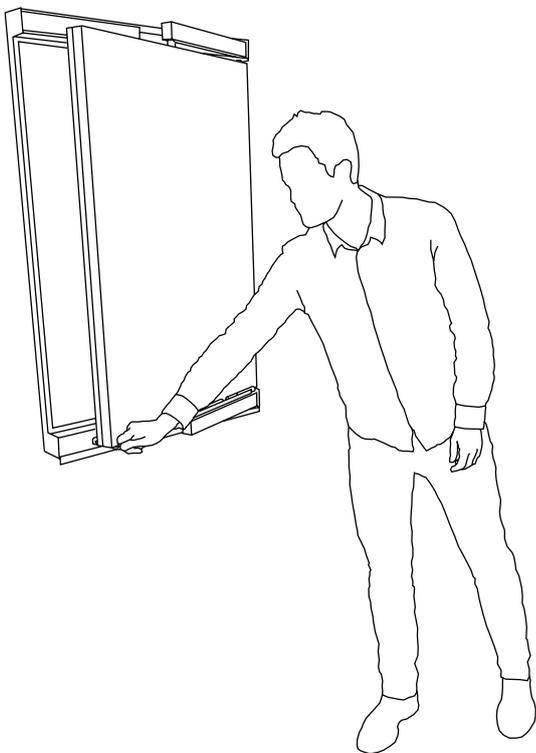


3) Close the panel

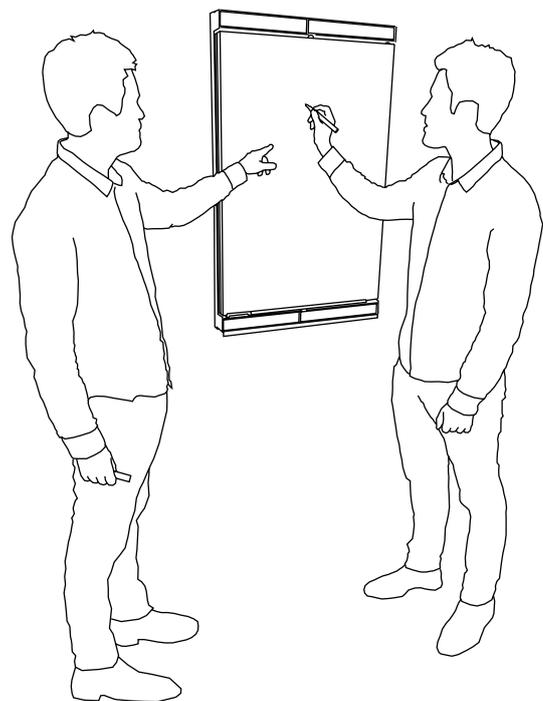

4) Create and collaborate

Flipmode dimensions

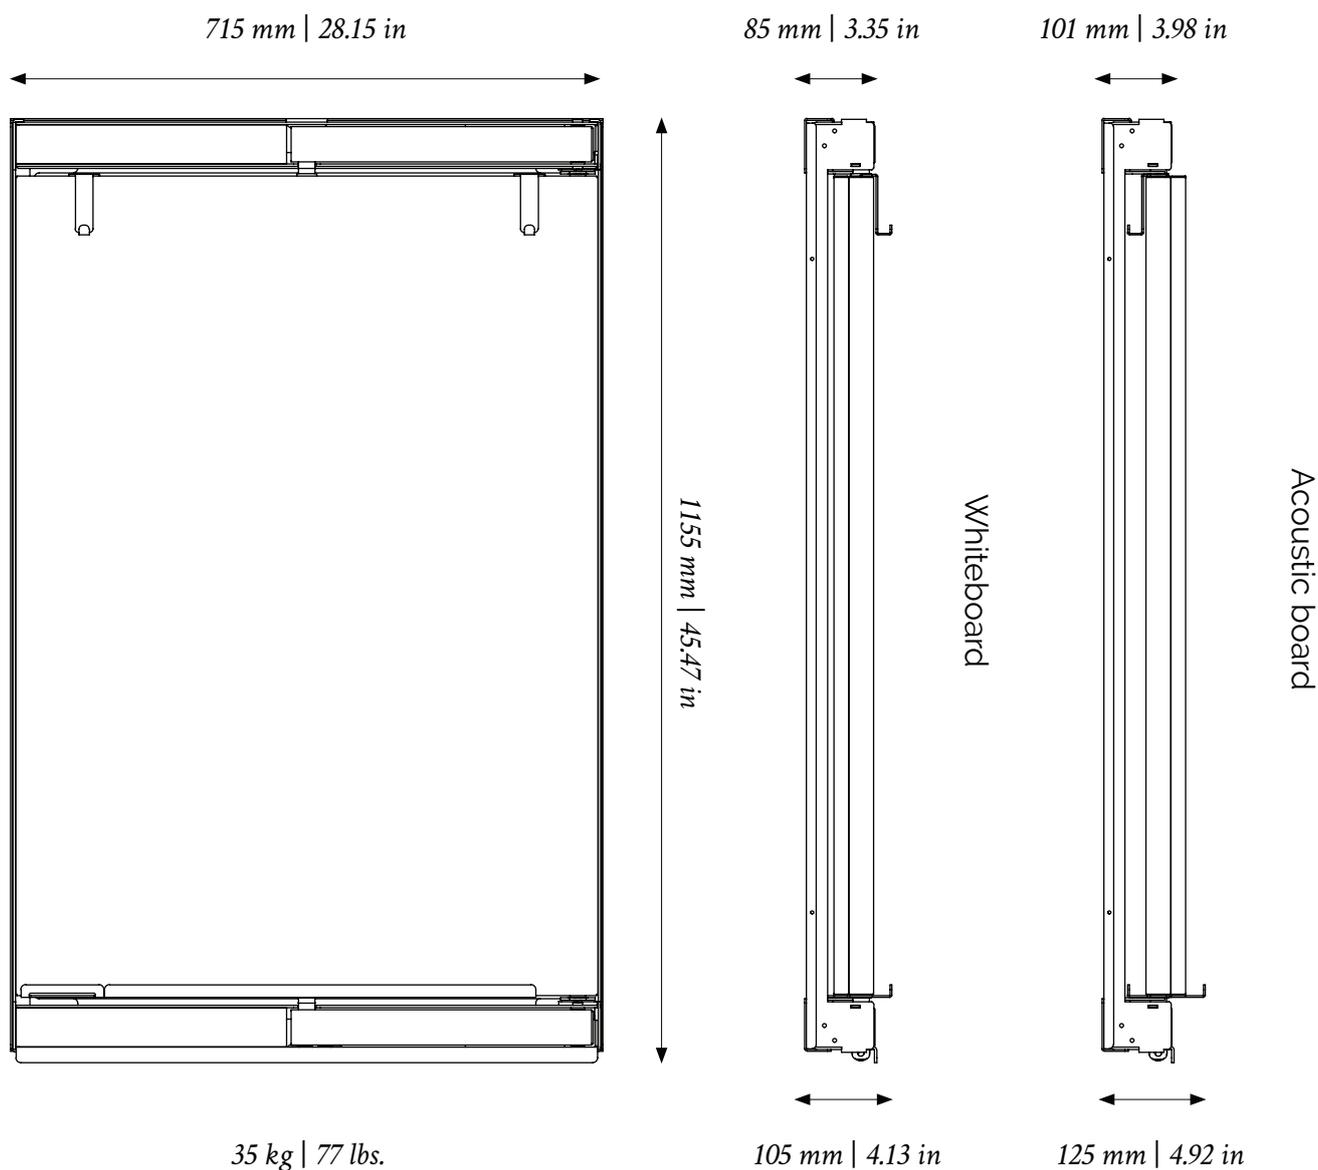

Contact

**Coolsome
Headquarters**

Coolsome Ltd
Koronakatu 2A
FI-02210 Espoo
FINLAND

CoolsomeUSA

140 W 3rd St
Jasper, IN 45746
USA

Customer Support

support@coolsome.fi
support@coolsomeusa.com

+358 9 522 500
Mon. - Fri. 8:30 - 17:30 (EET)

www.coolsome.fi
www.coolsomeusa.com